

# RHIUTH Top Hat Housing with Skirt

## Installation Guide

Regulatory Compliance: Safety UL1950

This guide explains how to attach:

- The RHIUTH top hat housing to different mounting structures used for the SpeedDome Ultra camera dome, and
- The skirt to the top hat housing.



**WARNING!** If the ceiling cannot support the camera dome, ask building maintenance to install additional ceiling supports.

### Parts Supplied

Install Kit 0351-2152-01

Housing assy., top hat	1	0400-1256-01
Shirt assy.	1	0400-1145-01
Install Kit	1	0351-2152-01
Anchor bolt, toggle, 1/4x2.25 w/Hdwr	2	2880-0011
Anchor, plastic	2	2880-0073-01
Screw, STAP, AB, 4.2x32, PHP	2	5810-4091-120
Washer, M4, Large O.D.	2	5842-0300-020
Clamp, Romex	1	6010-0036-01

### Tools Required

- Electric drill with 3.0mm (1/8in) and 7.0mm (1/4in) bits
- Phillips head screwdriver
- Ratchet wrench with 151mm (6in) extension and 10mm socket.

### Procedure

1. To mount housing [a] directly to a hard ceiling (Figure 1), punch or drill hole in the ceiling for cable access, then for:

*Concrete:* Use anchor hardware [b].

*Sheet rock:* Use anchor [c] and screw [d].

*Wood:* Use screw [d].

2. To mount housing [a] to a mounting structure (Figure 2).

**Note:** For RHIUFB, RHIUAB, or RHIUHC mounting structures, feed cables through the Romex clamp and into the housing (Figure 2); otherwise, feed cables directly into the housing.

Figure 1. Direct ceiling attachment


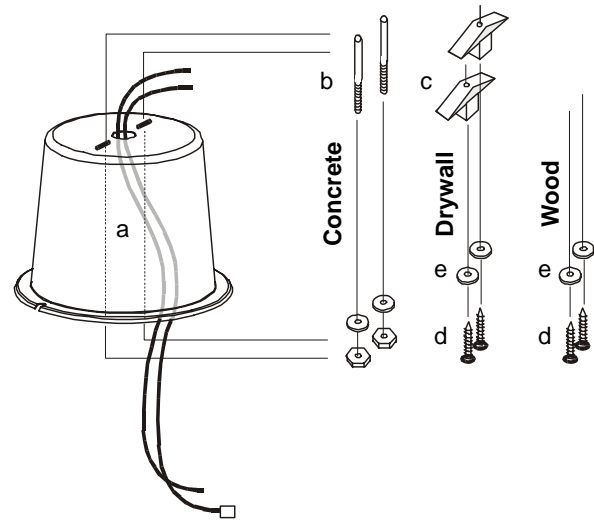



Figure 2. Attachment to mounting structure

To Tile Mount Bracket

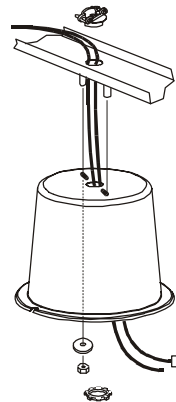


Use M6 hardware from mounting structure RHIUFB or RHIUAB


To Plate Adapter

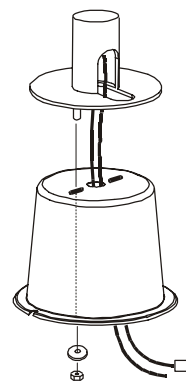

Use M3 hardware from mounting structure RHIUPNDT or RHIULWM

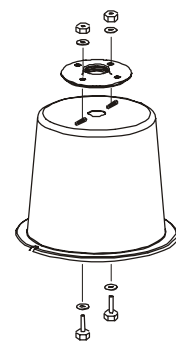

Use M6 hardware from mounting structure RHIUIBM

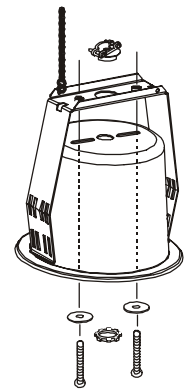

Use M6 hardware from mounting structure RHIUHC

## Procedure to Mount Skirt

Referring to Figure 3:


1. Take the T-lanyard of the skirt and bend one end of the "T" as shown.
2. Insert the T-lanyard into the slot in the top hat housing until both ends of the "T" extend and catch securely.



**WARNING!** Insert the T-lanyard exactly as shown to ensure the skirt is securely attached. Ensure the "T" extends once it is inserted.

3. Attach the skirt to the bottom of the top hat housing. It is magnetically held in place.

Figure 3. Attaching the skirt

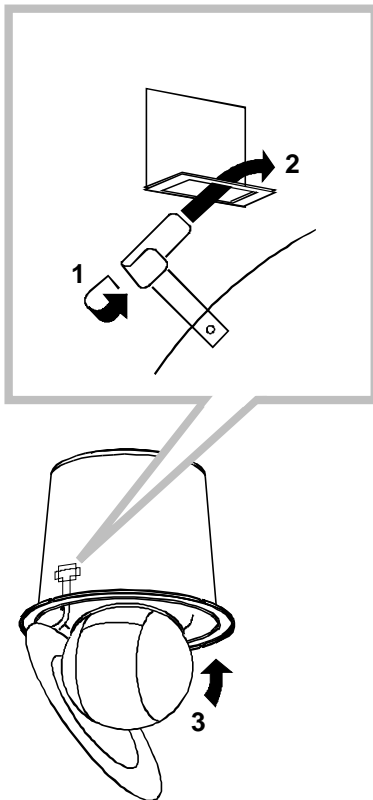

## Declarations

Thank you for using American Dynamics products. We support our products through an extensive and worldwide network of dealers. The dealer, through whom you originally purchased this product, is your point of contact if you have a need for service or support. Our dealers are fully empowered to provide the very best in customer service and support. Dealers should contact American Dynamics at (800) 507-6268 or (561) 912-6259 or on the web at [www.americandynamics.net](http://www.americandynamics.net).

**WARRANTY DISCLAIMER:** Sensormatic Electronics Corporation makes no representation or warranty with respect to the contents hereof and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose.

**NOTICE:** The information in this manual was current when published. The manufacturer reserves the right to revise and improve its products. All specifications are therefore subject to change without notice.

**LIMITED RIGHTS NOTICE:** For units of the Department of Defense, all documentation and manuals were developed at private expense and no part of it was developed using Government Funds. The restrictions governing the use and disclosure of technical data marked with this legend are set forth in the definition of "limited rights" in paragraph (a) (15) of the clause of DFARS 252.227.7013. Unpublished - rights reserved under the Copyright Laws of the United States.

**TRADEMARK NOTICE:** *American Dynamics* and *Sensormatic* are trademarks or registered trademarks of Sensormatic Electronics Corporation. Other product names mentioned herein may be trademarks or registered trademarks of Sensormatic or other companies.

**COPYRIGHT:** Under copyright laws, the contents of this manual may not be copied, photocopied, reproduced, translated or reduced to any electronic medium or machine-readable form, in whole or in part, without prior written consent of Sensormatic Electronics.

MDR 1/04