


# SpeedDome® Ultra V Camera Dome

## Configuration Utility Quick Reference Guide

The **Dome Configuration Utility** is used to set features for your camera dome via a text overlay menu. This menu is accessed via a keystroke combination on your camera controller. The utility provides settings relating to camera functions, alarms, text display, privacy zones, direction indicators, and password protection. Some items supplement similar features that may be available through your controller or switching system.

To start the utility:

1. Select a dome that you need to configure. Refer to your controller operating instructions for specific information.
2. Do one of the following:
  - If the dome is installed in a **SensorNet** or **RS-422** network, press and hold **Iris Open**, press and hold a **Focus** button, then press **Zoom Out (Zoom Wide)**.
  - If the dome is installed in a Manchester network, turn the key switch to **Prog** (or disable the system lock on the Touch Tracker), enter **66**, then press **Set Preset (Set Shot)**.
3. The **Dome Configuration Menu** appears on-screen.

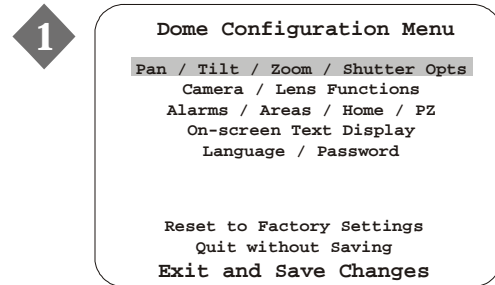


**Note:** If **Password Protection** is enabled, **Enter Password** (Screen 24) appears first.


Choose an option on this screen to change settings. The following table describes the available commands:

If you want to...	Use...
Move <b>Highlight Bar</b> .	<b>Pan/Tilt</b>
<b>Select</b> highlighted item.	<b>Focus</b>
<b>Increase</b> value of selected setting, or display <b>next choice</b> . Move cursor to <b>right</b> during naming.	<b>Zoom In (Zoom Tele)</b>
<b>Decrease</b> value of selected setting, or display <b>previous choice</b> . Move cursor to <b>left</b> during naming.	<b>Zoom Out (Zoom Wide)</b>
<b>Save changes</b> and <b>exit</b> from any screen	<b>Iris Close, then Focus</b>


### Pan, Tilt Zoom and Shutter Options

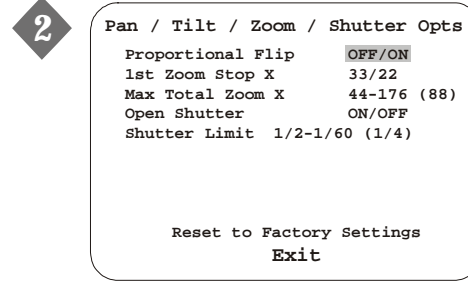

### Camera and Lens Functions

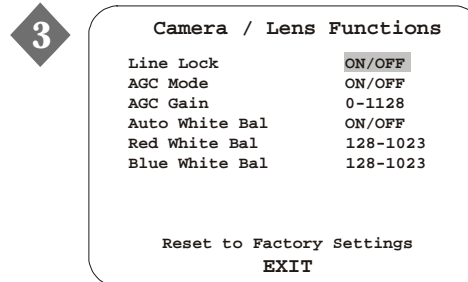


### Alarms, Areas, Home and Privacy Zones

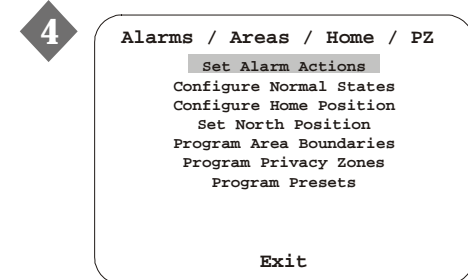

This screen provides links to lower level screens. See the following screens:

- **Set Alarm Actions** (Screen 7)
- **Configure Normal States** (Screen 8)
- **Configure Home Position** (Screen 9)
- **Set North Position** (Screen 10)
- **Program Area Boundaries** (Screen 11)
- **Program Privacy Zones** (Screen 12)
- **Program Preset** (Screen 16)


### On-Screen Text Display

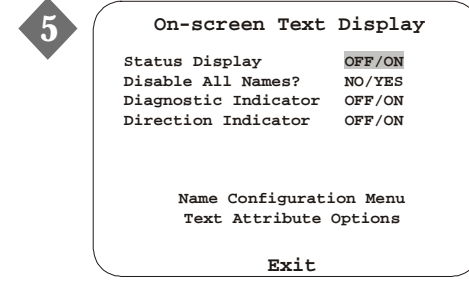

In addition to the settings available, this screen provides links to lower level screens. See also:

- **Name Configuration Menu** (Screen 18)
- **Text Attribute Options** (Screen 21)


### Language and Password

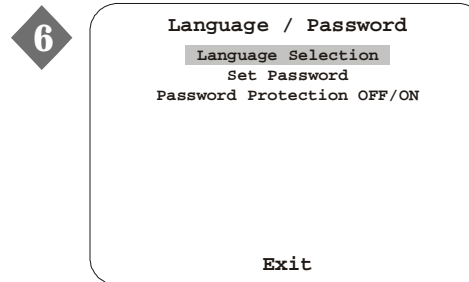

In addition to enabling password protection, this screen provides links to lower level screens. See the following screens:


- **Language Selection** (Screen 22)
- **Set Password** (Screen 23)

### Set Alarm Actions

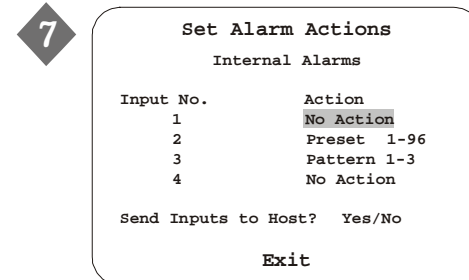


**No Action** is the default setting for all inputs. **Preset 1-96** or **Pattern 1-3** may be assigned as the alarm action.

### Configure Normal States

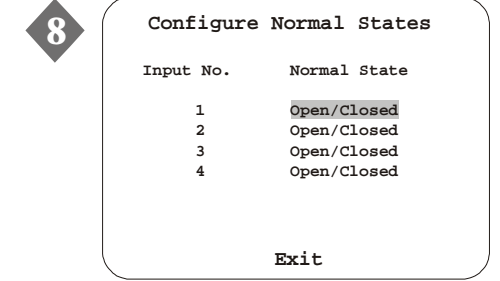


### Configure Home Position

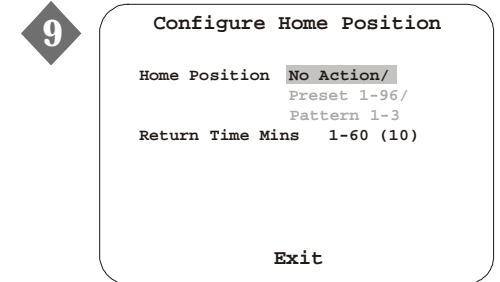


**No Action** is the default setting for the home position. **Preset 1-96** or **Pattern1-3** may be assigned to the home position.

### Set North Position

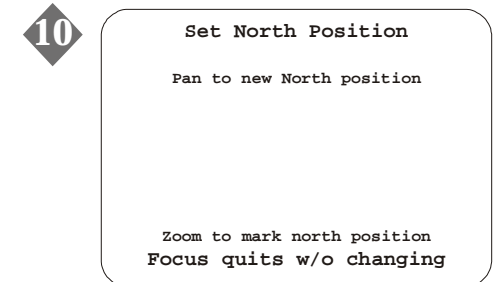


Default North Position is 0-degrees Pan/Tilt.

### Program Area Boundaries

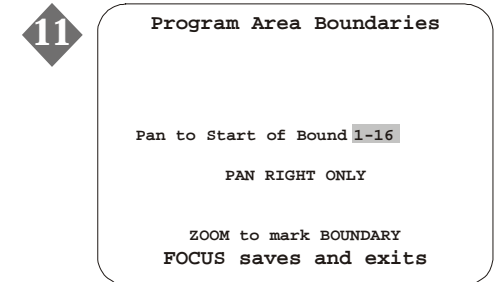

Up to **16** areas may be programmed. These areas are separate from areas that may be available through your switcher.


## Program Privacy Zones

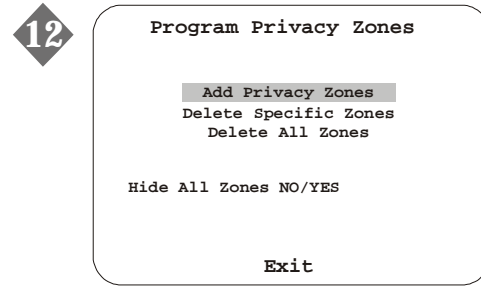

In addition to hiding all programmed privacy zones, this screen provides links to lower level screens. See the following screens:


- **Add Privacy Zones** (Screen 13)
- **Delete Privacy Zone** (Screen 14)
- **Delete All Zones** (Screen 15)

## Add Privacy Zones

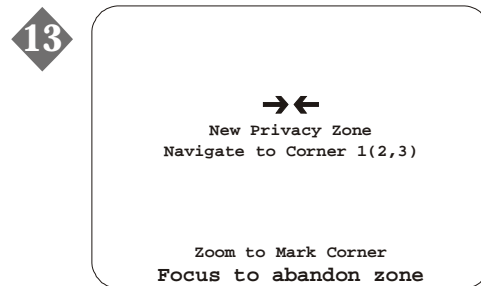


- Up to **8** Privacy Zones may be programmed.
- Three points must be selected to establish the Privacy Zone. The fourth point is automatically calculated.
- Use the **Pan/Tilt** control to position the arrows over the selection point. If arrows blink, this is not a valid selection area.
- Press **Zoom** to save the point.

## Delete Privacy Zone

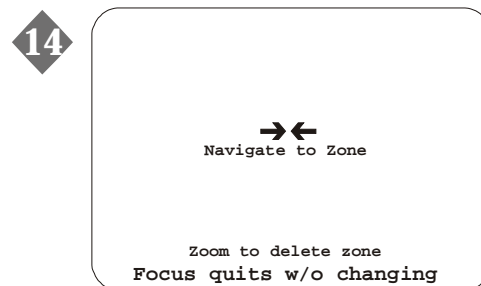


- Arrows must be clearly positioned in zone to delete.
- Use the **Pan/Tilt** control to position the arrows over the zone. If arrows blink, this is not a valid selection area.
- Press **Zoom** to delete the selected zone.

## Delete All Zones

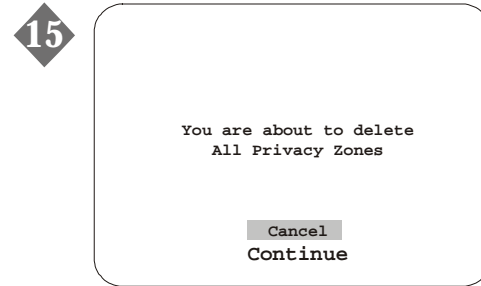

This option permanently removes all programmed Privacy Zones. To temporarily hide the zones, use *Hide All Zones*. See *Program Privacy Zones* (Screen 12).


## Select Preset to Program

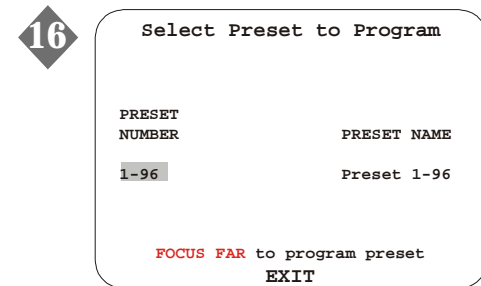

The number of presets available depends on your operating environment.


- If installed under **SensorNet** or **RS-422**, up to **96** presets are available.
- If installed under **Manchester**, up to **64** presets are available.

## Program Preset

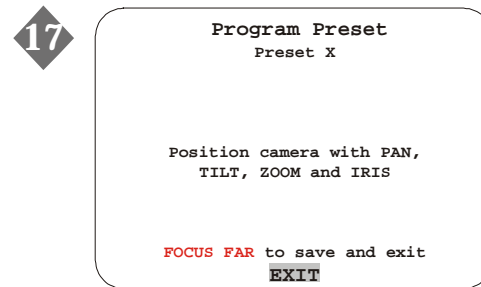


This screen also appears if a **Preset** is selected for an **Alarm Action** (Screen 7) or the **Home Position** (Screen 9), and the selected preset has not been programmed.

## Name Configuration Menu

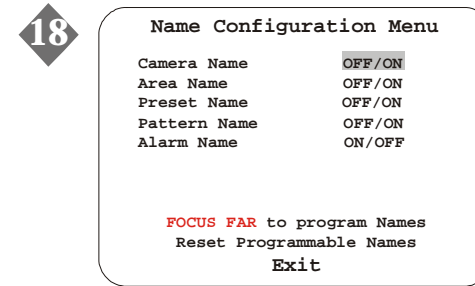


- Use **Zoom** to change the display setting.
- Press **Focus** to start name programming for highlighted setting.
- If Camera is selected, the **Name Programming** (Screen 20) automatically displays. For others, **Select Name to Program** (Screen 19) displays.

## Select Name to Program

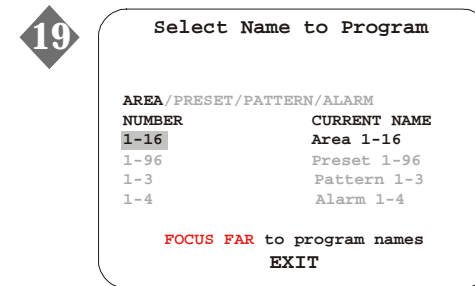


- Use **Zoom** to select the appropriate Alarm, Area, Pattern, or Preset number.
- Press **Focus** to start name programming.

## Name Programming

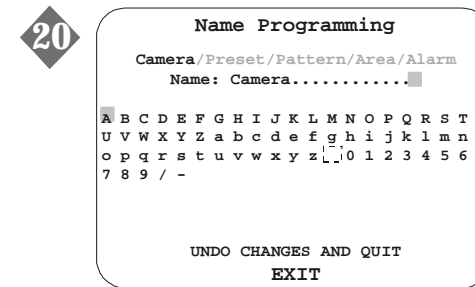


- Names may contain up to **18** characters.
- Use **Pan/Tilt** to move the highlight around available character field. Press **Focus** to select highlighted character.
- If you make a mistake, press **Zoom In** to move the highlight 1 space right in the name, or press **Zoom Out** to move the highlight 1 space left in the name.

## Text Attribute Options

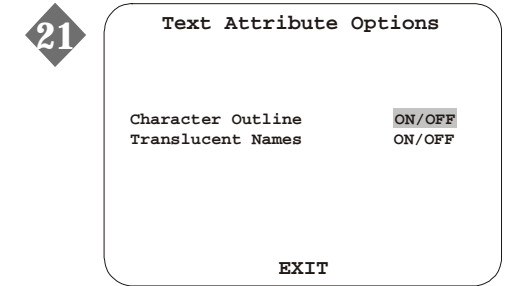

If **Privacy Zones** are displayed, **Translucent Names** is automatically disabled.

## Language Selection

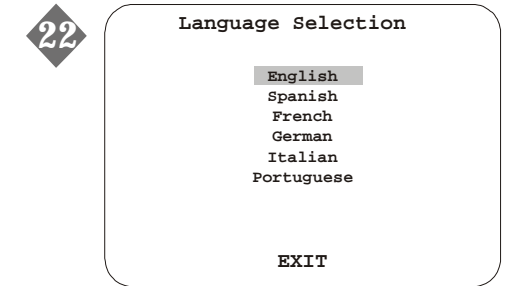

- Dome must reset for language setting to change.
- Programmed names do not change after setting the language. Only default names change.

## Set Password



- Passwords may contain up to 8 characters.

## Enter Password



- This screen only appears when *Password Protection* is enabled. The password must be successfully entered before the **Dome Configuration Menu** will appear.
- See **Name Programming** (Screen 20) for operating instructions.