

SpeedDome Ultra V / DeltaDome II

Addendum to Manuals

This addendum updates information found in the following documents:

- **SpeedDome Ultra V Configuration Utility Operator's Manual**, 8000-2697-01.
- **SpeedDome Ultra V Quick Reference Guide**, 8000-2698-01.
- **DeltaDome II Configuration Utility Operator's Manual**, 8000-2697-02.
- **DeltaDome II Quick Reference Guide**, 8000-2698-02.

Changes to the Camera / Lens Functions Menu

Camera / Lens Functions		
Line Lock	ON/OFF	
AGC Mode / Gain	ON/OFF	0-1128
A-F Auto Return	ON/OFF	
Auto White Bal	ON/OFF	
Red White Bal	128-1023	
Blue White Bal	128-1023	
Reset to Factory Settings EXIT		

AGC Mode and Gain Settings

The **AGC Mode** and **AGC Gain** settings have been consolidated into a single menu item: **AGC Mode / Gain**.

To change the AGC Mode / Gain settings do the following:

1. Start the *Dome Configuration Utility*.
2. Select **Camera / Lens Functions**.

3. Use the Pan/Tilt control to move the highlight to **AGC Mode / Gain**. The highlight appears in the first field (AGC Mode).
4. Press **Zoom** to change the AGC Mode setting:
 - Select **Off** to set the AGC mode to manual. Continue with step 5.
 - Select **On** to set the AGC mode to automatic.
 - The default setting is **On**.
5. Move the Pan/Tilt control right to change the **AGC Gain** setting.
IMPORTANT! AGC Mode must be **OFF** to change this setting.
6. Press **Zoom** to change the AGC Gain setting.
 - **Zoom Out** decreases the value.
 - **Zoom In** increases the value.

Refer to your Operator's Manual for information about other settings.

Auto Focus Auto Return Setting

A new function has been added to the software. The **Auto Focus Auto Return** feature enables the dome to resume auto focus mode when the dome is moved after manually adjusting the focus.

To access this feature:

1. Start the *Dome Configuration Utility*.
2. Select **Camera / Lens Functions**. The following screen appears.
3. Move the highlight to **A-F Auto Return**.
4. Press **Zoom** to change the setting.
 - To allow the dome to resume auto focus function automatically, select **ON**.
 - To prevent the dome from resuming auto focus automatically, select **OFF**.
 - The default setting for the feature is ON.

Refer to your Operator's Manual for information about other settings.