

SpeedDome® Ultra V Camera Dome

Using Patterns with Privacy Zones and Direction Indicators

In order to use patterns with Privacy Zones and Direction Indicators effectively, separate patterns should be programmed to run when Privacy Zones are active and when Privacy Zones are hidden.

1. Determine if Direction Indicators will be used.
 - If Direction Indicators will be used, follow the instructions in the “*SpeedDome Ultra V Configuration Utility Operator's Manual*” (8000-2697-01) to display them.
 - If Direction Indicators will not be used, continue with step 2.
2. Program the Privacy Zones. Follow the instructions in the “*SpeedDome Ultra V Configuration Utility Operator's Manual*”.
3. Program a pattern (for example, Pattern 1). Follow the instructions included with your video control system.

Use this pattern when Privacy Zones are active.

4. Hide the Privacy Zones. Follow the instructions in the “*SpeedDome Ultra V Configuration Utility Operator's Manual*”.
5. Program a second pattern (for example, Pattern 2). Follow the instructions included with your video control system.

Use this pattern when Privacy Zones are hidden.

IMPORTANT!

Only 3 patterns may be programmed for each dome. If you must have two Patterns for use when Privacy Zones are displayed or hidden, only one other pattern may be programmed.