

# Installation Guide

## How to Attach a DeltaDome Camera to an Existing CobraDome Backbox

### Parts Supplied


|                             |   |              |
|-----------------------------|---|--------------|
| Adapter assembly, DeltaDome | 1 | 0400-1205-01 |
| Cover assembly, Replacement | 1 | 0400-1206-01 |
| Skirt assembly, DeltaDome   | 1 | 0400-1145-01 |

### Procedure

Referring to the figure:

1. Replace the existing CobraDome bracket assembly with the DeltaDome adapter assembly.
2. Attach the DeltaDome camera to the adapter assembly.
3. Attach the T-lanyard of the replacement cover assembly to the adapter assembly as shown in figure. Reference Warning and detail shown below for skirt T-lanyard insertion.
4. Snap the replacement cover assembly to the bottom of the adapter assembly.
5. Attach the T-lanyard of the DeltaDome skirt assembly to the replacement cover assembly.
  - a. Take the T-lanyard of the skirt assembly and bend one end of the "T" as shown.
  - b. Insert T-lanyard into the slot in the cover assembly until both ends of the "T" extend and catch securely.

**WARNING!** Insert the T-lanyard exactly as shown to ensure the skirt is securely attached. Ensure that the "T" extends once inserted.

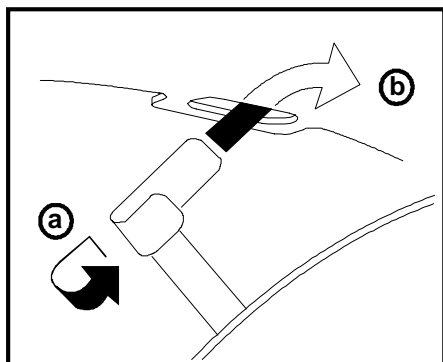

6. Attach the skirt assembly to the bottom of the cover assembly. It is magnetically held in place.

